



FUEL SYSTEM / FUEL INJECTION

6. Reach under tank and locate pump harness electrical connector. Carefully lift tab (H) and disconnect harness.

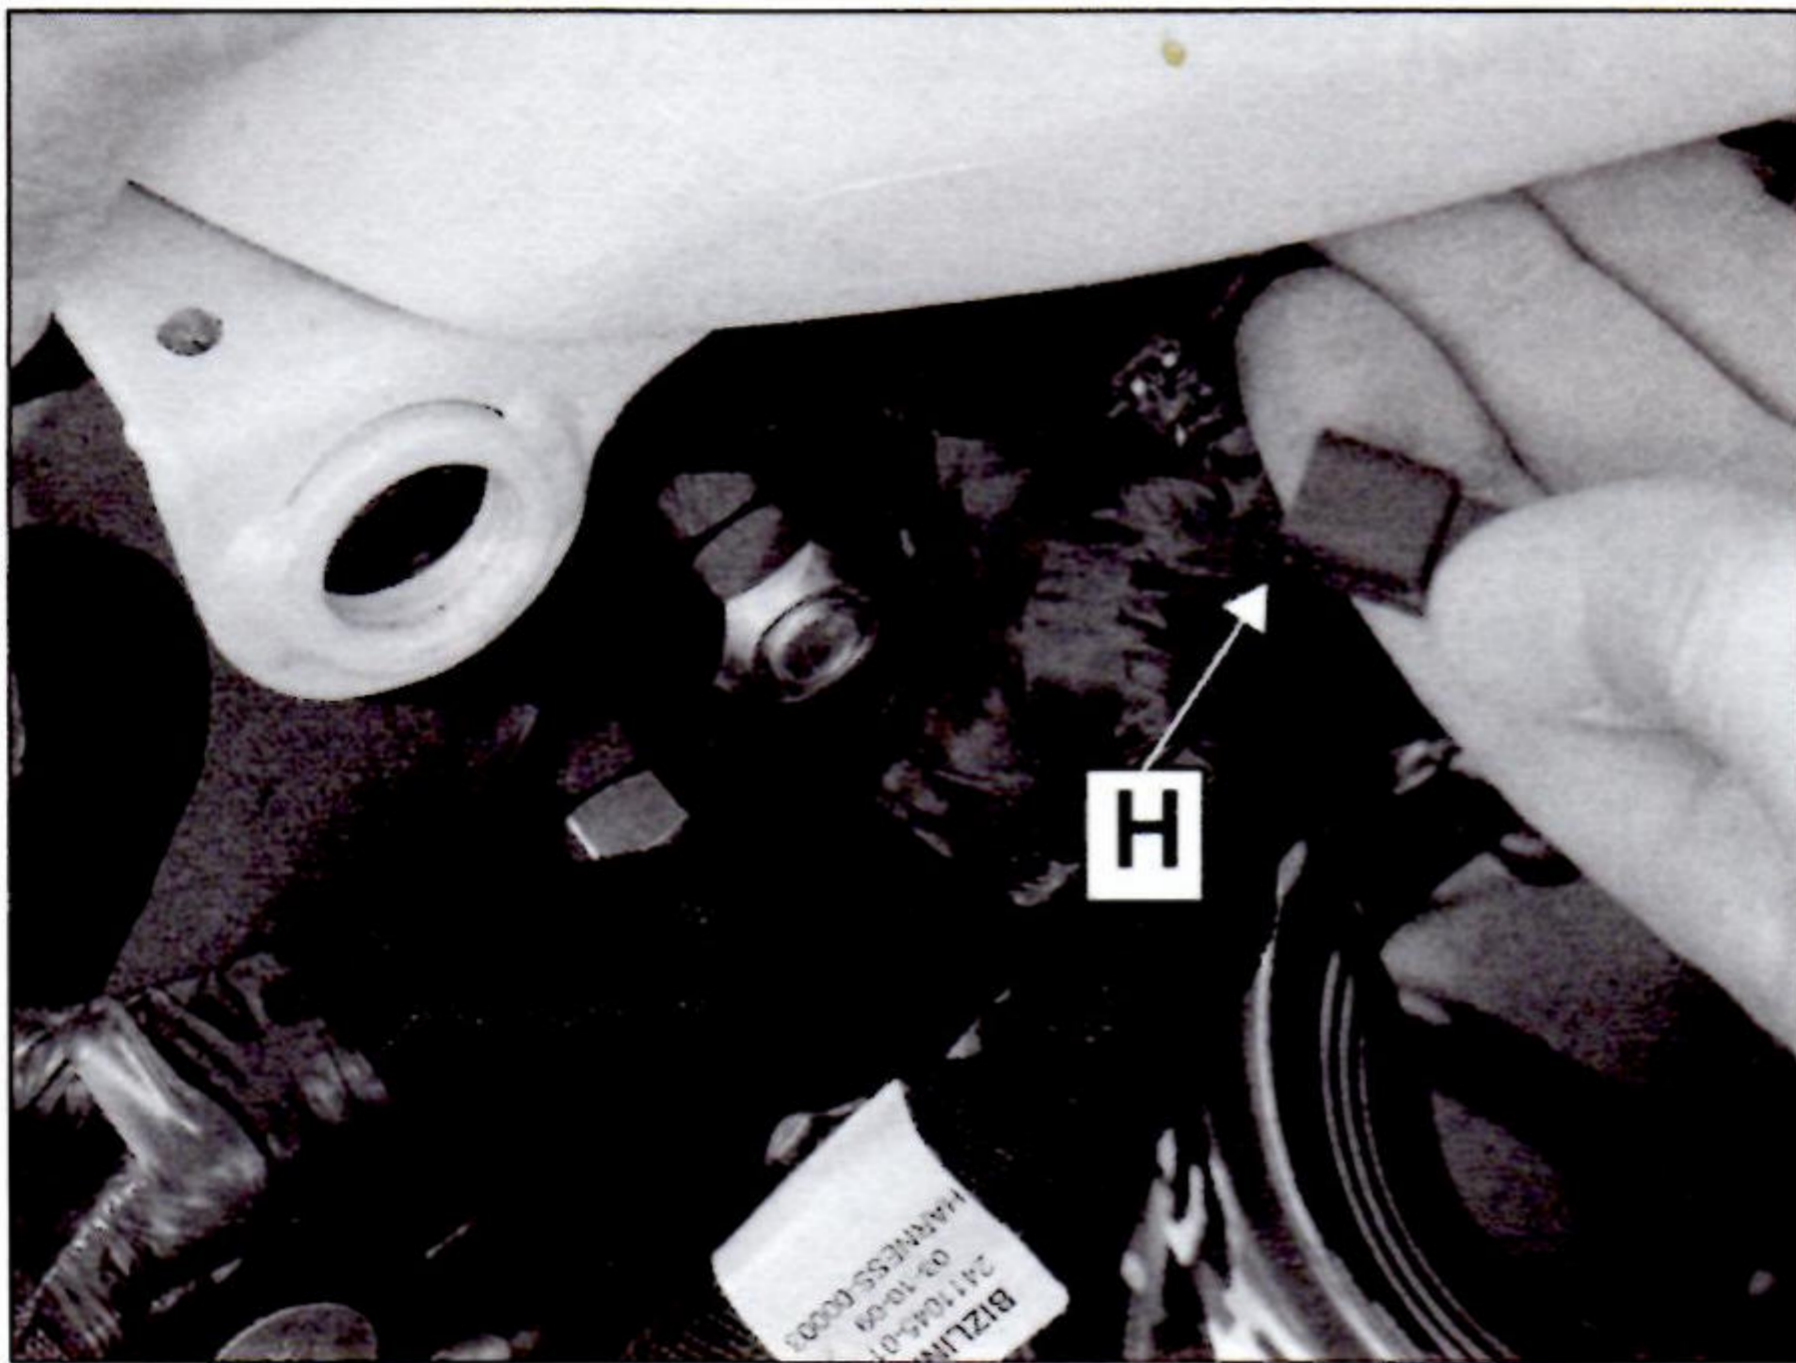

8. Install fuel tank fitting plug tool (see Special Tools for application details) onto fuel pump fitting to protect the fitting and prevent fuel from seeping out of tank.

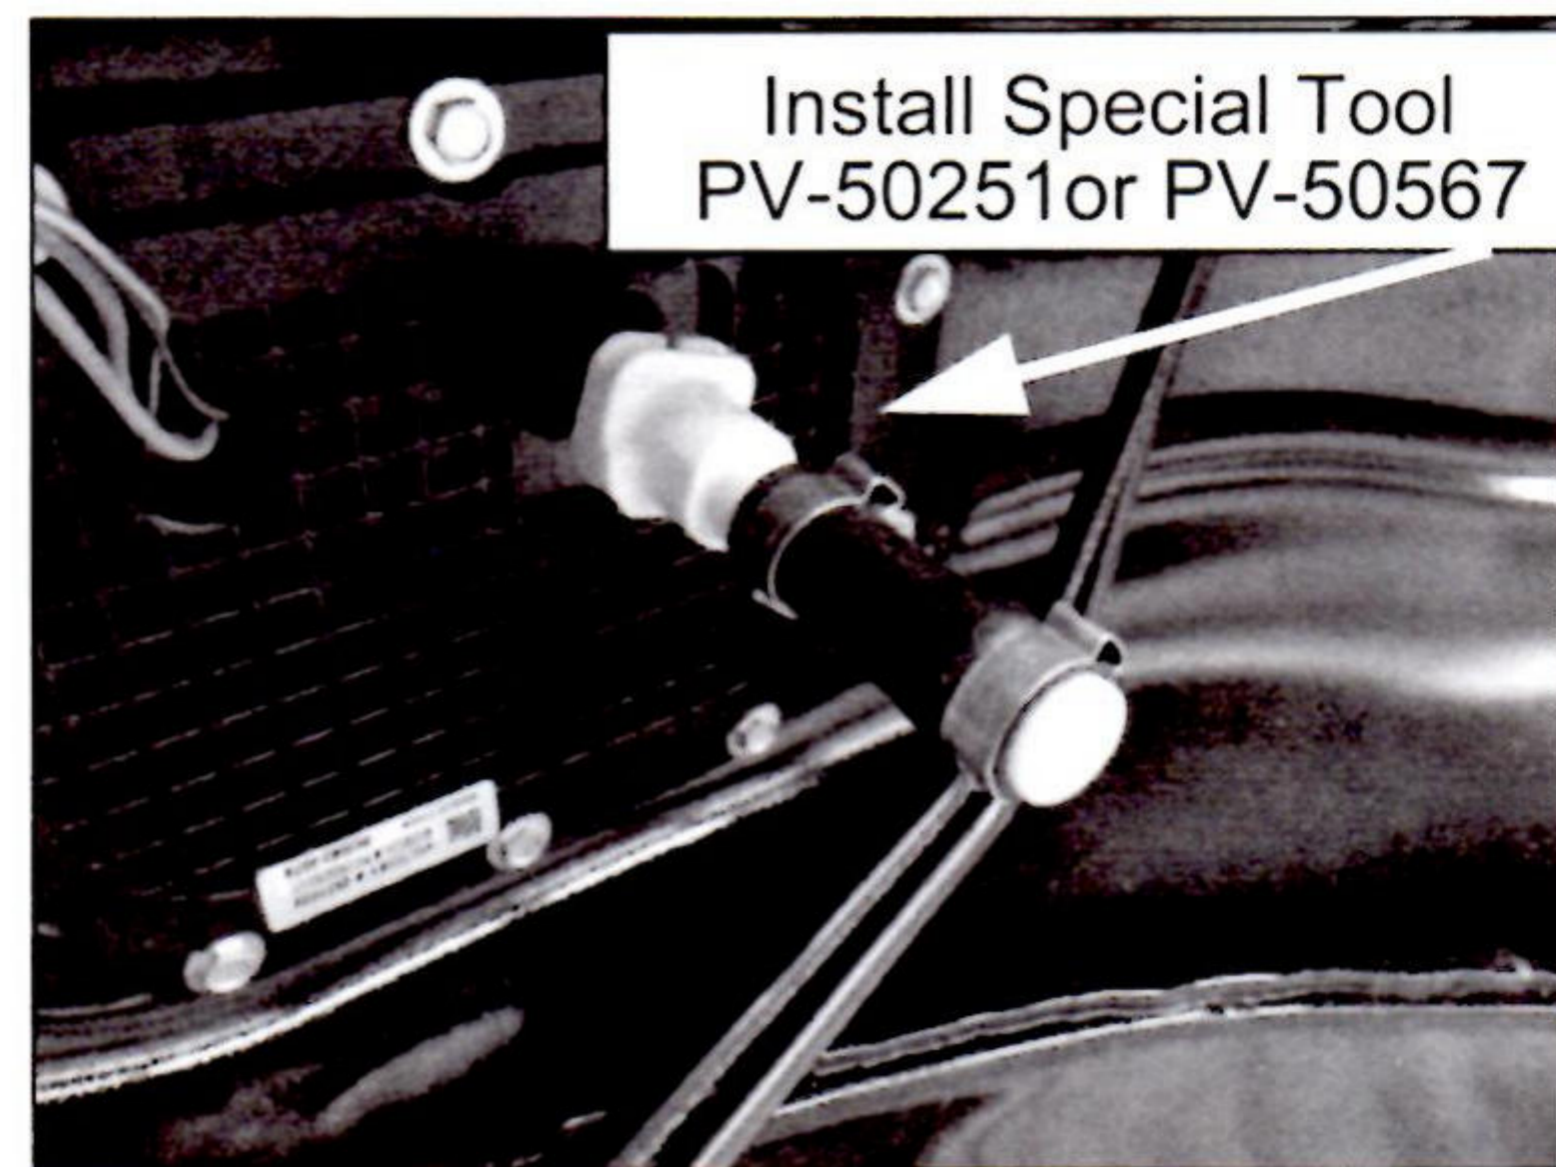


9. Grasp tank at front edge. Lift rear of tank high enough for fitting on fuel pump and special plug tool to clear the frame.
10. Carefully pull tank rearward to release front tank mounts from front isolators.
11. Place tank on suitable flat surface that will not scratch fuel tank. Do not place fuel tank on frame/seat area of the motorcycle.

CAUTION

Fuel Tank Removal: DO NOT move tank rearward prior to disconnecting fuel line. To disconnect the fuel line fitting located on the bottom of the tank, lift up rear of tank allowing tank to pivot on front isolators. The fuel line is secured to the main wiring harness by a tie strap that should not be removed.

7. Disconnect fuel line from pump by squeezing release tabs (I) on both sides of the fitting. Pull fuel line straight down off pump fitting.

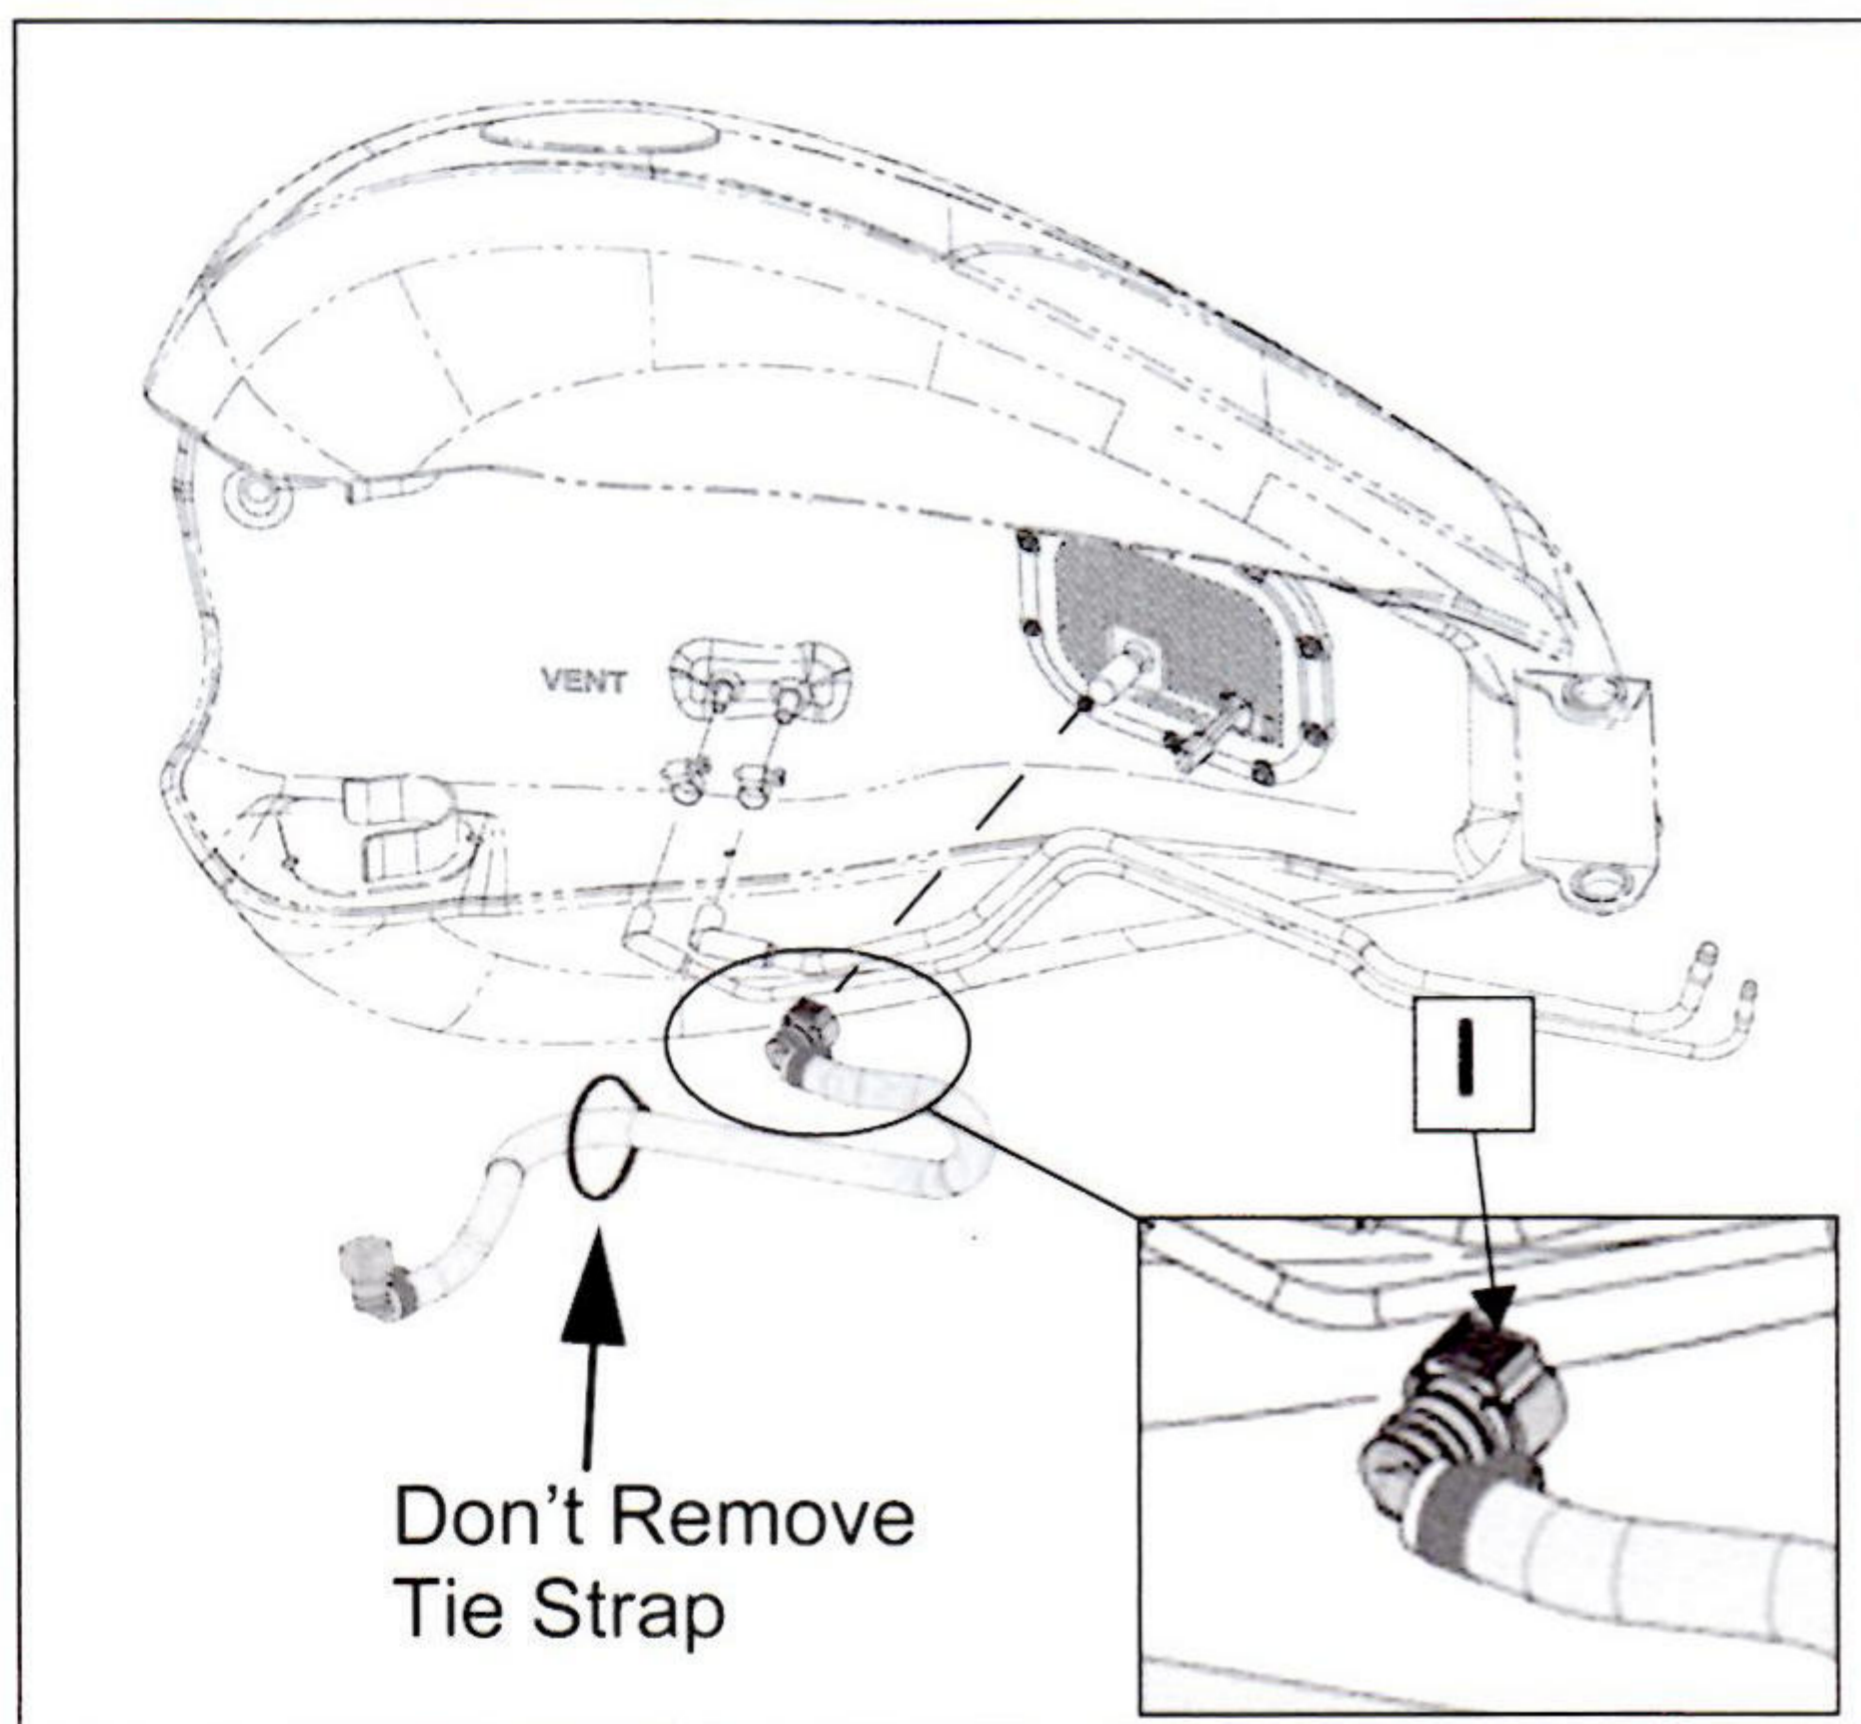

FUEL TANK INSTALLATION

- Secure handlebars in the straight ahead position. Place a protective cloth on front of tank to prevent damage.
- Carefully place fuel tank on motorcycle frame. Be careful not to snag or catch special fuel tank plug tool or fuel tank fitting on frame of vehicle.
- Assemble vent and drain lines to tank (if removed).

